

Eco Unity 144 Computer Access Revision – Imported Icons

Directions for loading into your ECO

1. Download the MTI file for ECO Unity 144 computer access and save it to a USB drive.
2. Insert the USB drive into your ECO, and then go to the Transfer Memory Menu
3. In the Transfer Memory Menu, select Load One User Area.
4. Select an area that is NOT your custom area. The computer access memory transfer will erase all the memory in whatever area you choose.
5. When the memory transfer is complete, select OK, and then go to the Choose Overlay Menu.
6. In the Choose Overlay Menu (User Area Menu) select Switch User Area.
7. Select the area named ECO UN CA 144 Imports. This area has no core vocabulary, just computer access activity rows and pages.

Directions for copying rows and pages to your custom area

1. You are now working in the area named ECO UN CA 144 Imports. Go to the Choose Overlay Menu (User Area Menu) in the ToolBox.
2. In the Overlay Menu, select COPY PAGES/ACTIVITIES, and then COPY ALL ACTIVITIES.
3. Select your own user area to tell the activity rows to go there. If you see a note that says all activities with the same name will be replaced, select YES.
4. Next, select COPY ALL PAGES. Select YES when you see the note in yellow.
5. When you see the question, “Do you want to replace pages with the same name?” select YES.

Directions for using the new computer access rows and pages

1. In your own user area, hide, erase, or delete the links to the “LAUNCH” activity rows and pages.
2. Select the activity row key labeled COMPUTER. You can use the Modify Activity Menu in the ToolBox to move this activity row if you choose.



3. The revised computer access row looks like this:



Select the key labeled INTERNAL (ECO internal computer access) to see a page of application menus for the ECO Windows computer.



4. You may want to simplify this page by hiding or deleting keys that you will not be using. For example, if you are not using the Madentec Tracker for headpointing, you may hide or delete the link to the HP MOUSE page. If you are not using IntelliTools, then hide or delete the IntelliTools keys.
5. There are keys that appear to be duplicates for many applications. The top one of these will run the application, and open a menu page. The bottom one of the two opens a menu page without running the program. If you have Word Pad open, and then go to another application, use the key labeled MENU to return to the Word Pad menu.

ECO Unity Computer Programs page

This page shows just two rows of the computer programs page so that you can see your computer applications on the ECO. If you select the Go Back key on the top left, you go back to Core vocabulary. If you select the CORE key at the top right, you return to Core Vocabulary with the Computer Activity Row at the top.

On the Programs key, the light blue outlining means that this key is linked to and opens up another page.



The solid light green keys are tools for ECO computer operations. The light green key labeled refresh is for returning the computer focus to an open window on your desktop. When you select Refresh, it sends the mouse cursor to top center of the ECO desktop, activates MOUSE DOWN, and then MOUSE UP. The light green key marked ADJUST will minimize the open Window, and then maximize it to fit your ECO screen better. This ADJUST key also returns the computer focus to the top window.

The key labeled TOGGLE allows you to switch between open applications. You may also use the TOGGLE key to “wake up” an application that has lost its focus.

Most applications have a link to the Mouse page for scanning. If you are using Madentec Tracker for headpointing, you may want to copy and paste the key for the headpointing mouse to other locations. Plug in a mouse to your ECO and do a right click to find the menu for Setup, Copy, Cut, and Paste.

There are many keys on the computer programs page for applications that you may not choose to use. You may either hide these unused keys, or clear them out to make room for other page links.

Choose Your Spell Page


If you want spell mode to look just like a Pathfinder with Spell One Word and Auto Spell on:

1. In the Choose Overlay Menu (User Area Menu) select the User Defined key for Spelling Keyboard. Change your User Defined spell page to **144 CORE SPELL**.
2. In the Feedback Menu set Spell One Word ON, Auto Spell ON, and Icon Prediction GREY.
3. In the Selection Technique Menu (Access Method Menu) check to be sure that Predictive Selection is OFF.

Customize Your Computer Access

You can store links to your own personal files in ECO by using the **Run Program** tool. First we will look at a key that is already programmed with this tool.

Go to the Computer Access Activity Row, and then select Word. On the Word Pad page you will see a key labeled START. Use your set-up key to look at how this start key is programmed. You see that there is a Run Program tool, and then a computer address for the file that starts up Word Pad.

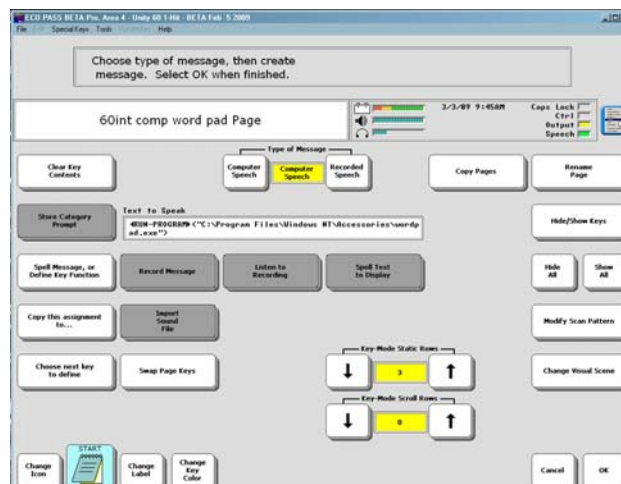

Select OK to exit this screen

Use the computer access Word Pad page to start Word Pad.


Write some text into your new word document. You can use either Core words, or spell from the Spell Page.

Save your document using the keys on the Word Pad Page.

Now use the Run Program tool to create a link from the Word Pad Page to your new document.

Program a link with the Run Program tool:

1. Use the set-up key, and then select a blank key on the Word Pad Page.
2. Select Spell Message or Define Key Function
3. Select Insert Tool (you may need to use MORE KEYS to see insert tool).
4. Select More Items at the bottom of the page.
5. Select Run Program
6. You see titles for all the executable files on your ECO's C drive.

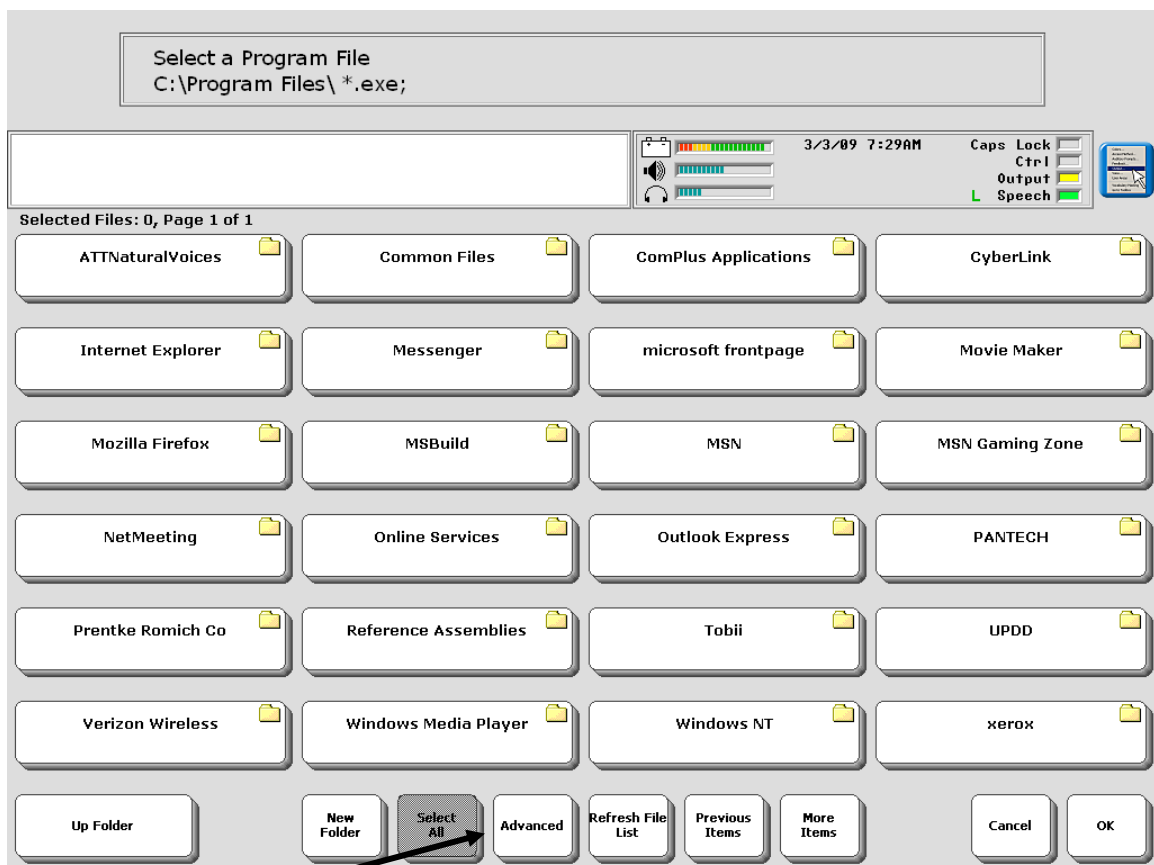

7. Select Advanced
8. Select Yes for Show All Files, and then select OK.
9. Use the navigating keys at the bottom of the screen to locate the file you want.
10. If you make a wrong selection, you can use Delete Character or Clear to start over.
11. Finish by putting a label and an icon on the key you are programming.